

MODE SWITCH

How to Use it!



Models P2 and P3

The P2, and P3 subwoofers are equipped with 2 set-up modes designed for the S2 and S3 speakers. These settings allow a perfect blend between the subwoofer and the main speaker. Either of these two settings will **bypass** the **Bass Range** and **Blend** controls of the sub because they are no longer needed, but use of the **Bass Level** control is still possible. The following chart explains how to set the switch and under what circumstance. The switch has 3 positions in total.

S2 Position:	Used when you combine with a S2 speaker
S3 Position:	Used when you combine with a S3 speaker
SUB Position:	Used when you combine with a S1, C1, another brand of loudspeaker, or when used as a separate subwoofer independently of the main speakers.

NOTE: If you use the S1 or C1 speakers with the P2 or P3 subwoofers, you must use the **"SUB"** position, and manually adjust the Bass Range, Bass Level, and Blend controls until you are satisfied with the results, just like a typical powered subwoofer. The easiest system to set up would be one with matching components as in the above chart. The next page explains how to set the controls when in **"SUB"** mode.

Model P1

The P1 subwoofer offers a two position switch. One setting for blending with the S1 or C1, and the other for separate subwoofer use. Please adhere to the following chart.

S1/C1 Position:	Used when you combine with a S1, or C1 speaker
SUB Position:	Used when you combine with a S2, S3, another brand of loudspeaker, or when used as a separate subwoofer independently of the main speakers.

NOTE: The **"SUB"** Mode here works the same as the P2, and P3 described above. It turns the sub into a typical subwoofer and you must set the Bass Range, Bass level, and Blend controls to get the best sound possible. See the file "Sub Mode-Set-Up Tips" for more information.